



Install MiLight Lights with FUT089

MiLight lights are more advanced than ordinary light bulbs, offering features that require a remote control or smartphone app to operate. Unlike traditional light bulbs that you can turn on and off using a wall switch, MiLight lights need to be paired with a remote control or app to function properly.

When you install MiLight lights and switch on the light switch, the lights won't respond to the remote control immediately. The MiLight lights and the remote control need to be 'linked' just like pairing a Bluetooth speaker with a phone.



How to Pair/Link MiLight Lights with the FUT089 Remote Control

You can group your MiLight lights so they can be controlled together. For instance, if you install MiLight lights in your living room, dining room, and bedroom, you can set them to respond as one group. However, for more customized control, you can set up separate groups or zones. This allows you to switch off the lights in your bedroom, dim the living room lights to a warm color, and keep bright lights in the dining room, all from the remote control.

Steps to Pair the Lights:

1. Switch off the wall light switch(es) in Zone 1.
2. Install the MiLight lights.
3. Switch on the wall light switch(es) in Zone 1.
4. Within 3 seconds of turning on the lights, press the '|' button of Zone 1 on the remote control 3 times.
5. Successful pairing will be indicated by the MiLight lights in Zone 1 blinking green 3 times.

Repeat these steps for Zone 2 using the '|' button of Zone 2 on the remote control. Do the same for Zones 3 and 4 with their corresponding buttons.


How to Unpair/Unlink MiLight Lights with the Remote Control

If you need to change your zone settings or are moving to a new location and want to take your MiLight lights with you, it's best to reset them to factory settings by unpairing/unlinking them from the remote control.

Steps to Unpair the Lights:

1. Switch off the light switch(es) in Zone 1.
2. Wait for 10 seconds.
3. Switch on the light switch(es) in Zone 1.
4. Within 3 seconds of turning on the lights, press the '|' button of Zone 1 on the remote control 5 times.
5. Successful unpairing will be indicated by the MiLight lights in Zone 1 blinking red 10 times rapidly.

Remote Control Functions

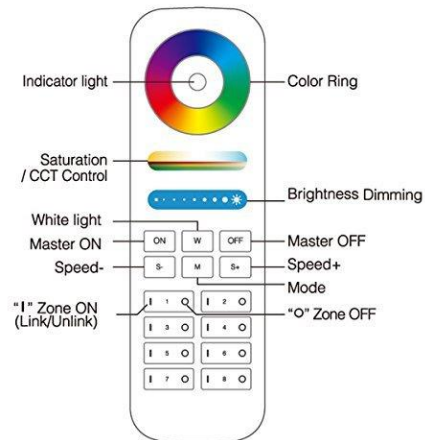

- **Indicator Light:** Blinks quickly when the battery needs to be changed.
- **Color Ring:** Touch to select your desired color.
- **Saturation/CCT Control:** After selecting a color, adjust the saturation by sliding this bar. For white, adjust between warm and cool.
- **Brightness Dimming:** Slide to adjust the brightness.
- **Master ON/OFF:** Turns all lights on or off. Press OFF for 2 seconds to activate night mode.
- **Mode:** Cycle through 9 different dynamic modes.
- **S- and S+:** Adjust the speed of the dynamic mode
- **Zone 1 to 8:** Control specific zones independently. Press | symbol to activate this zone.